

SUBMERSIBLE POND PUMP GUIDELINES

1 SAFETY FIRST! Water and power can be fatal!

All installations should be constructed, commissioned and maintained according to any relevant government laws, by-laws and regulations and according to the instruction manual provided with the product. Running garden pumps on extension leads is illegal. An earth leakage (RCD) device must be fitted. Any 240 Volt electrical work must be carried out by a licensed electrician.

Recommended usage for lengths of power cable/cord on pumps:

3 pin plug - 2m or 3m cable Minimum length for outdoor use (patios, decks, courtyards)
3 pin plug - 10m cableRecommended length for outdoor installations; however no more than 2m should be left uncovered by
conduit or similar, and cable must not be left tightly wound in a coil.
2 pin plug – 1.8m cableIndoor use only, aquariums and table fountains

TIP! Pumps don't last forever. Always install to allow easy access and replacement!

2 CHOOSE THE RIGHT FLOW RATES

TIP! Use a garden hose to do a mock-up of the installation to get a rough idea of what flow you are trying to achieve.

Suggested flow rates:

Wall and table fountains	200 to 300 L/Hr
Small statues up to 0.4m high	400 to 500 L/Hr
Medium statues up to 0.8m high	600 to 750 L/Hr
Large and tiered statues up to 1.5m high	1000 to 1200 L/Hr
Statues over 1.5m and pond cascades	1200 to 2000 L/Hr
*Waterfalls and streams up to 0.4m wide	•
*Large waterfalls and streams up to 1.0m wide.	6000 to 12000 L/Hr

^{*}See our waterfall pump and tubing size guide for further information.

TIP! Add 20% to required flow rates to allow for friction loss in pipework.

3 DON'T FORGET THE HEAD HEIGHT!

Measure head height from the water level to the highest outlet. Add together the flow rates required, add 20% to allow for friction loss. If more than one function is being performed by the one pump, then choose a pump that can give the total flow at the greatest height.

TIP! Remember it is easier to throttle back an oversized pump, but there is nothing you can do with an under-sized pump!

4 POND SIZE - TURNOVER RATES

Suggested turnover rates:

Ponds up to 1000L	once per hour	TIP!
Ponds 1001 - 5000L	once every 2 hours	High fish stocks and koi ponds will require higher turnovers.
Ponds 5001 - 15000L	once every 3 hours	Discuss this with your dealer for further advice.
Ponds over 150001	once every 4 hours	

5 TUBING SIZE AND LENGTH

Undersized tubing severely restricts the performance of the pump. Long runs and high waterfalls may require larger tubing diameters, or multiple tubing. Please enquire if you are unsure.

Flow in L/Hr	Tubing Ø (dia.)	Flow in L/Hr	Tubing Ø (dia.)
300 - 600	12mm	5001 - 8000	32mm
601 - 1200	16mm	8001 - 15000	40mm
1201 - 2000	20mm	15001 - 20000	50mm
2001 - 5000	25mm	Over 20000	Please Enquire

6 COST TO RUN PUMPS - The Cheapest pump is not necessarily the best long term option!

Example: A REEFE RP18000 filter and waterfall pump (250 Watt) costs approximately \$550.00 per year, run continuously. In comparison, a 0.75hp pool pump 15000 L/Hr (550 Watt) would cost approximately \$1220.00 per year, run continuously. So a short-term saving becomes a long-term liability!

TIP! Have an electrician set up a daylight sensor switch on waterfall pumps so the pump turns off at night - this saves power and money!

7 PUMP DIMENSIONS

We have included the dimensions of all our pond pumps in this catalogue. The sizes are in mm and include the cable exit in the length, and outlet height in the overall height.

8 DRY-MOUNTING POND PUMPS, IN-LINE USE

Pond Pumps are not designed to be self-priming, so when they are installed in a dry-mount or in-line situation, they must have "flooded" suction. That is, the pump must be installed below the water level so that the water gravity-feeds into the inlet of the pump. When dry-mounting, it is also necessary to protect the pump from the sun to avoid over-heating, and install a prefilter to prevent particles entering the suction line and blocking the pump. Not all pond pumps can be dry-mounted, check the tables in this product guide, there is a column that is headed, "DRY-MOUNT FLOODED", if this says NO, then this pump is not designed for dry-mount installations.

9 NOTE: THESE GUIDELINES ARE BROAD GENERALISATIONS & MAY NOT SUIT EVERY APPLICATION

Please consult your retail specialist for more information and advice. It is the user's responsibility to ensure that the product chosen is suitable for the users application. Incorrect use of products voids all warranty.